

HearLink™

Assistive Listening Transmitter

Being close to someone who's hard of hearing can be challenging, but it doesn't have to be painful.



If members of the household can't agree on the television volume, we recommend the BeHear NOW + HearLink bundle:



BeHear® NOW
W&H headset

HearLink™
W&H transmitter



Any standard television set
with analog audio out port

HearLink is a simple device that connects to the analog sound output on any standard television or other audio device. Using Bluetooth it sends the audio signal to the BeHear headset, which can be customized easily to suit the hearing capabilities and preferences of the wearer.


Main Features

- Supports aptX™ Low Latency codec (32ms latency with BeHear headset)
- Supports AVRCP commands (play/pause) for seamless operation with BeHear
- AutoON (automatic 'power on' if charged from the television set USB port)
- Battery operation for mobile use with portable players
- Lightweight and compact



Hearing Enhancement and Assistive Listening Products

Mechanical Diagram

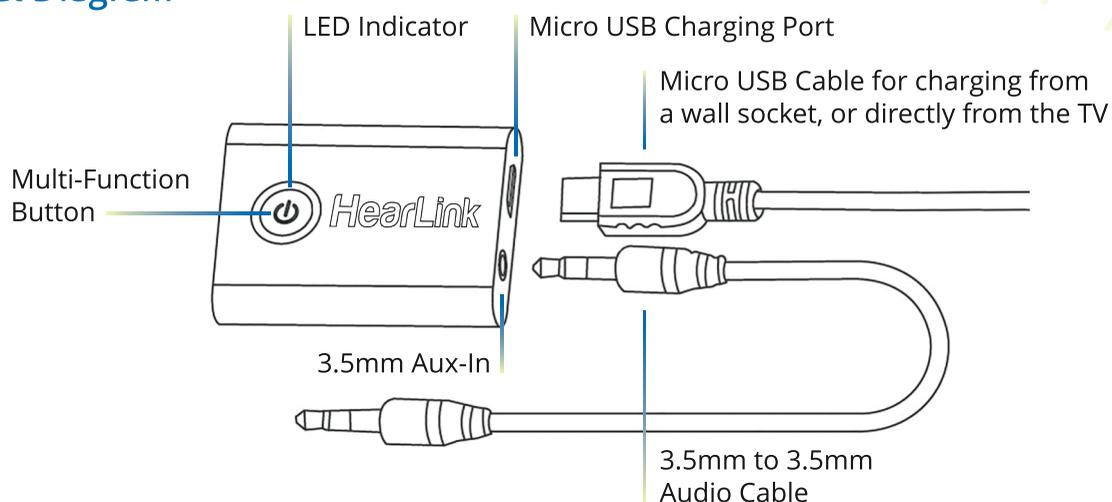

Model No.	BTI-015A
Bluetooth version	V4.0, Class II
Bluetooth profile	A2DP, AVRCP
Bluetooth chipset	CSR BC8670
Dual stream	Two BeHear headsets can be connected simultaneously to the transmitter
Supported audio codecs	aptX™ Low Latency, aptX™ – first priority, for single user only SBC, ACC, MP3 – second priority, switch automatically for dual user option
Working time (between charges)	Up to 8 hours
Charging time	Approximately 2 hours
Charging supply	5VDC, ≥300MA
Operating temperature	-10 - 55°C (14 - 131°F)
Net weight	14.5 grams (0.5 oz.)
Dimensions	46mm x 33.2mm x 9.7mm (1.8 x 1.3 x 0.4 inches)

BeHear headsets and television sold separately.



Sound enhancement by Alango Technologies, Ltd.
info@WearAndHear.com | www.WearAndHear.com